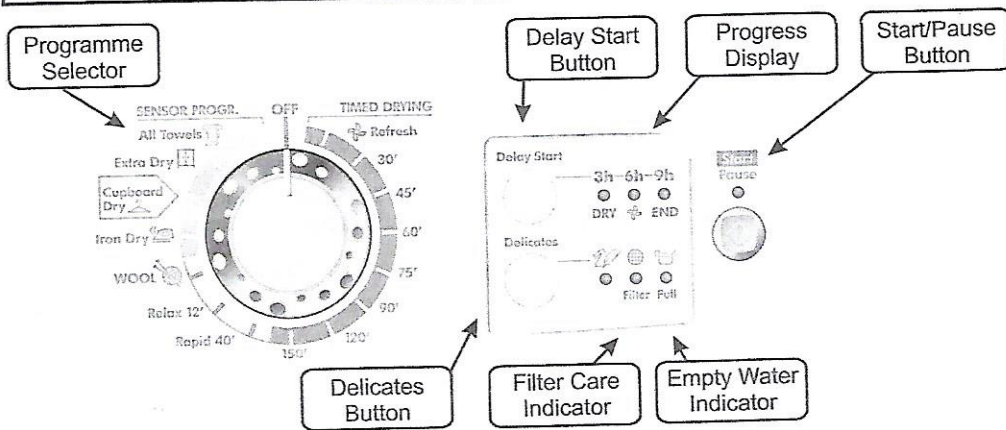


CONTROLS AND INDICATORS

 


Control Panel and Indicator Lights

 

Programme Selector – Select the required programme

Delay Start button – Allows the user to delay the start of the drying cycle (see details of Operation on page 10)

Start/Pause button – Press to commence the selected drying programme

 
Delicates button  – Press to reduce the heat level for delicate items, the indicator above the button will light up. To change the heat setting the programme must be reset

Low Heat – Indicator light **ON**
High Heat – Indicator light **OFF**

Empty Water indicator  – Lights when the water container is full
Filter Care indicator  – Lights when the filter needs cleaning

Progress display

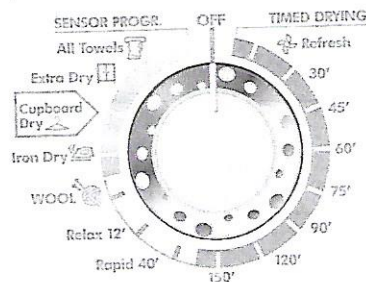
DRY – When the programme is selected the DRY indicator will flash, when the programme starts the DRY indicator will light up.

 – Indicator lights when there is a short time left until completion of the programme. At this stage of the drying cycle the machine enters the Cool Down phase.

The length of the Cool Down phase varies between 10 and 15 minutes depending on the programme.

END – Indicator lights when the programme is finished.

SELECTING THE PROGRAMME



The Sensor Dry machine gives many options for drying the laundry to suit all circumstances. The table on the next page lists the programmes and the function of each programme.







Note: The sensor may not detect a small load of small articles. For small loads and separate items or pre-dried fabrics with low moisture content, use the timed programmes.

Set the programme between 30 and 75 minutes depending on the load size and dryness required, and select high or low heat depending upon the fabric type.

If the sensor does not detect the item the dryer will only operate for 10 minutes before going into cooldown.

If the load is too large or too wet to tumble dry the dryer will automatically go into cooldown after approximately 3 hours.

SELECTING THE PROGRAMME

PROGRAMME	DESCRIPTION
All Towels 	Select the degree of dryness that you require. This ranges from All towels dry cycle for bath towels and bathrobes, Extra Dry cycle through for items that will be put away without ironing, to the programme that leaves the laundry suitable for ironing.
Extra Dry 	
Cupboard Dry 	
Iron Dry 	
Wool 	A gentle programme specially created to get woollens softer after air-drying. This delicate warm air cycle, lasting 12 minutes, can also be used to get woollens 'refreshed' after being stored in the wardrobe.
Relax 12	The programme provides a conditioning and antcrease function. The dryer will heat the load for 9 minutes followed by a 3 minute cool down period and is especially good for garments which may have been left for some time prior to ironing, in a linen basket for example. Garments may also become stiffened when dried outside on a washing line or inside on radiators. This programme relaxes the creases in the fabric making ironing quicker and easier.
Rapid 40	The Rapid 40 programme allows a drying cycle to be completed quickly. This is an ideal programme for having dry, refreshed and ready-to-wear clothes in less than 40'. This special programme constantly monitors the dryness and temperature in the drum thanks to the sensor using, using the exact time and energy you need! The machine finishes the cycle when the cupboard dry level is reached. The stated cycle length could vary according to fabric types, load size and residual moisture in the garments. The maximum load is 2kg and the programme is suitable for all types of fabric where tumble drying is appropriate.
150'	150' minutes of drying
120'	120' minutes of drying
90'	90' minutes of drying
75'	75' minutes of drying
60'	60' minutes of drying
45'	45' minutes of drying
30'	30' minutes of drying
Refresh 	Tumbling the laundry in cool air for 20 minutes