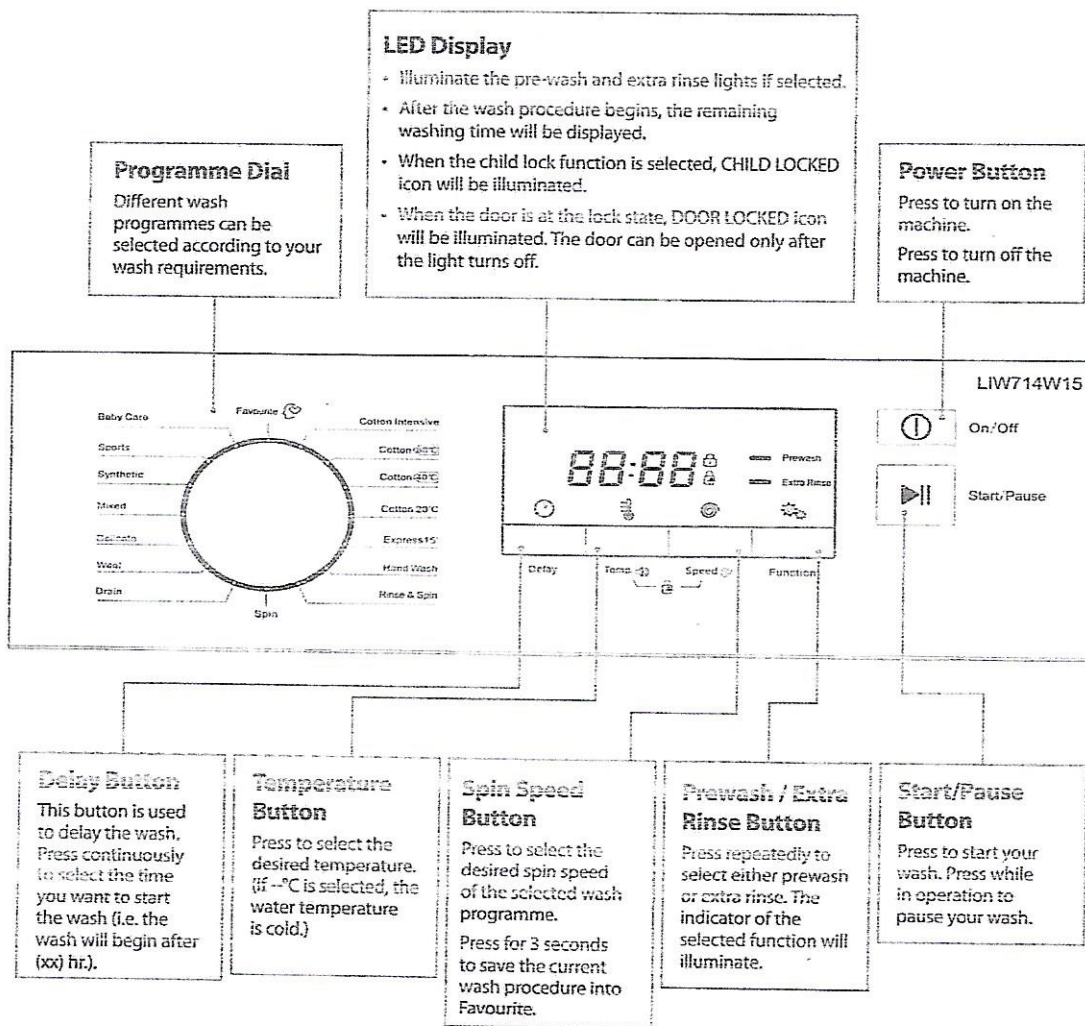


# WASHING MACHINE

## The Control Panel



 
 
- If you need to change a setting after the wash has started, turn the power OFF. After the power is turned OFF, the function was set will be cancelled. Press the Start / Pause button.
- Water is poured into the washing machine to perform an inspection at the time of shipment from the factory, so there may be drops of water or condensation in the washing machine. This is not an indication of a malfunction.




During initial start-up and use of the unit, there may be a slight smell while the motor is settling in. This is not a fault; this is normal operation.

## Selecting the Programme

Here are the available programmes. Temperature can be selected separately for certain programmes.

Programme	Energy	Detergent Box			Default Temp. (°C)	Default Time (hr)	Default Spin Speed (rpm)
		Case I	Case II	Softener Case			
Cotton Intensive	7.0	O	●	O	40	2:40	800
Cotton  60°	7.0	X	●	O	60	1:47	1200
Cotton  40°	7.0	X	●	O	40	1:32	1200
Cotton 20°	2.0	O	●	O	20	1:13	1200
Express 15'	2.0	X	●	O	Cold	0:15	800
Hand Wash	2.0	O	●	O	Cold	1:00	800
Rinse & Spin	7.0	X	X	O	NA	0:31	1000
Spin	7.0	X	X	X	NA	0:14	1000
Drain	-	X	X	X	NA	0:01	0
Baby Care	3.5	O	●	O	60	1:39	1000
Sports	3.5	O	●	O	40	1:19	800
Synthetic	3.5	O	●	O	40	1:40	800
Mixed	7.0	O	●	O	40	1:13	1000
Delicate	2.5	X	●	O	30	1:00	600
Wool	2.0	X	●	O	40	1:06	400

 EN 60456 test program / Energy label program with Cotton 60°C / 40°C, max. spin speed and intense function.

- Means must
- O Means optional
- X Means not necessary

The energy class is A+++

Energy test program: Cotton 60°C/40°C (under the highest speed; others as the default)

Half load for 7.0kg machine: 3.5kg.

"Cotton 60°/40°" are the standard washing programmes to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumption for washing that type of cotton laundry, that the actual water temperature may differ from the declared cycle temperature.

Note: The parameters in this table are only for user's reference. It is different from the normal time when using depending on the temperature and the load.



- Washing times depend on programme and temperature settings selected.
- Washing times may be longer if the laundry in the drum needs to be balanced.

Here are the additional functions and option settings.

Programme	Delay	Extra rinse	Prewash
Cotton Intensive	O	O	O
Cotton <60°	O	O	X
Cotton <40°	O	O	X
Cotton 20°	O	O	O
Express 15'	O	X	X
Hand Wash	O	O	O
Rinse & Spin	O	X	X
Spin	O	X	X
Drain	O	X	X
Baby Care	O	O	O
Sports	O	O	O
Synthetic	O	O	O
Mixed	O	O	O
Delicate	O	O	X
Wool	O	O	X

O Means optional  
X Means not available

## Delay Start the Programme

1. Select a wash programme.
2. Press the **Delay** button repeatedly to set the delay hours for the programme to start (0-24 hr).
3. Press the **Start / Pause** button to confirm and commence the delay function.

To cancel the delay function:

- before the programme starts, press the **Delay** button repeatedly until 0 hr
- while the programme is running, press the **Power** button to Off.